

How to operate & reset your Intruder Alarm System

Setting Your Alarm System

1. Close all doors and windows
2. At the keypad, enter your user code or present your proximity tag.
3. Press '0' – to set your system if code is used.
4. Leave via the designated exit route. (The internal sounder will sound)
5. Close the final door
- 6. When the internal sounder stops, the system is set.**

Unsetting Your Alarm System

1. Enter through the designated entry door and go to the keypad.
2. As you enter the premises the system starts the entry timer and the keypad gives the entry tone.
3. Key in your access code or present user tag.
4. The entry tone stops.
- 5. The system is now unset.**

Resetting the System

1. Enter your Master code when you see the 'ALERTS' on the screen.
2. Press 'ENT' to view each message in turn
- 3. Press 'ENT' to reset the system.**

The 'ALERTS' message should not appear again, unless :-

- The condition still remains (e.g. a mains failure).